


Mounting wings for N-Series encoders and decoders, under-table or wall-mounting

STEP 1


Remove 2 screws from bottom of unit.

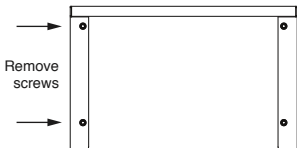

DO NOT REMOVE
ALL SCREWS AT ONCE

STEP 2

Align and secure first wing to bottom of unit. Verify screws are tight.

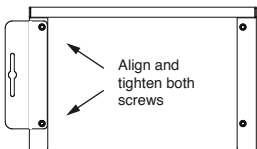

STEP 3


Remove remaining two screws.



DO NOT REMOVE
ALL SCREWS AT ONCE

STEP 4

Complete installation by securing second wing. Verify all screws are tight.

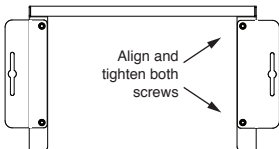

Please contact SVSi technical support at support@svsiav.zendesk.com or 256.461.7143 x9900 for any installation issues.

www.svsiav.com • 256.461.7143

800DOCMWQSREV1.0